

Description	PRTC110	
Internal Channel Temperature Sensor	Semiconductor	
Internal Channel Temperature Range	-20 °C to +80 °C (-4 °F to +176 °F)	
Internal Channel Temperature Resolution	0.1 °C (0.18 °F)	
Internal Channel Temperature Accuracy	±0.5 °C (±0.9 °F)	
Remote Channel Temperature Sensor	Thermocouple Types J, K, T, E, R, S, B, N	
Remote Channel Temperature Range, Resolution and Accuracy	*See Table Below for Details	
Pressure Range (Nominal)	0 to 2 inH2O (differential)	0 to 5 inH2O (differential)
Pressure Range (Max)	-2 to +4 inH2O (differential)	-2 to +8 inH2O (differential)
Pressure Resolution	0.002 inH2O	0.005 inH2O
Pressure Accuracy	0.5%FSR, 0.25% @ 25 °C Typical	
Cold Jct. Compensation	Automatic	
Channels	2 Internal & 1 Remote	
Memory	21,844/channel	
Reading Rate	1 reading every 2 seconds up to 1 reading every 12 hours	
LED Indicator	Red	
Required Interface Package	IFC200	
Baud Rate	57,600	
Typical Battery Life	2 years	
Operating Environment	-20 °C to +80 °C (-4 °F to +176 °F), 0 to 95%RH (non-condensing)	
Dimensions	2.7 in x 1.6 in x 0.8 in (68 mm x 41 mm x 20 mm)	
Material	ABS plastic	
Weight	8.8 oz (250 g)	
Approvals	CE	

* Remote Channel


Thermocouple	Range (°C)	Resolution	Accuracy
J	-210 to +760	0.1 °C	±0.5 °C
K	-260 to +1370	0.1 °C	±0.5 °C
T	-260 to +400	0.1 °C	±0.5 °C
E	-260 to +980	0.1 °C	±0.5 °C
R	-50 to +1760	0.5 °C	±2.0 °C
S	-50 to +1760	0.5 °C	±2.0 °C
B	+60 to +1820	0.5 °C	±2.0 °C
N	-260 to +1300	0.1 °C	±0.5 °C

Battery Warning

WARNING: FIRE, EXPLOSION, AND SEVERE BURN HAZARD. DO NOT SHORT CIRCUIT, CHARGE, FORCE OVER DISCHARGE, DISASSEMBLE, CRUSH, PENETRATE OR INCINERATE. BATTERY MAY LEAK OR EXPLODE IF HEATED ABOVE 80 °C (176 °F).

Specifications subject to change.

See MadgeTech's terms and conditions at www.madgetech.com

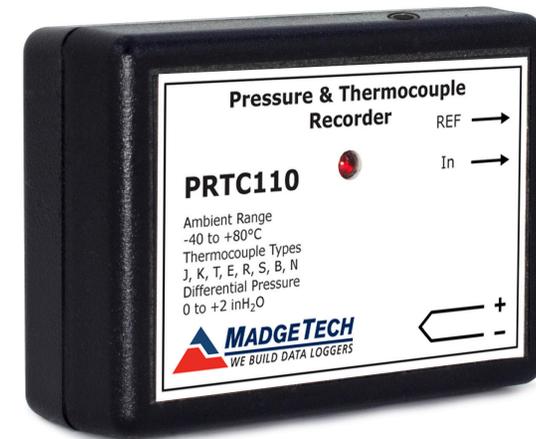

PRTC110
Differential Pressure and Thermocouple
Temperature Data Logger

Product Notes

Pressure Sensor

The PRTC110 measures differential pressure in the range of 0 to 2inH₂O or 0 to 5inH₂O, depending upon the range purchased. The device is also equipped with one thermocouple input. Two 0.080" diameter pressure ports are located on the side of the device. The pressure ports will accept 1/16"ID flexible rubber tubing with up to 5/32"OD. The tubing can be connected to two different pressure locations in which the device will measure the difference between the two pressure's.

LEDs

Once started, the LED will flash at the selected reading rate to indicate that the device is running.

Thermocouple Type

- To change the thermocouple type in the MadgeTech software:
- In the **Connected Devices** panel, click the device desired.
- On the **Device** Tab, in the **Information** Group, click **Properties**. Or, right-click the device and select **Properties** in the context menu.
- On the **General** Tab, change the **Thermocouple type** in the drop down menu.
- Apply these changes, there will be a prompt to reset the device, select **yes**.

Please note that the same thermocouple type must be used on all of the channels.

Installation Guide

Installing the Interface cable

- IFC200
- Insert the device into a USB port. The drivers will install automatically.

Installing the software

The Software can be downloaded from the MadgeTech website at the following link: www.madgetech.com/software-download. Follow the instructions provided in the Installation Wizard.

Device Operation

Connecting and Starting the data logger

- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select "**Custom Start**" from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click "**Start**". ("**Quick Start**" applies the most recent custom start options, "**Batch Start**" is used for managing multiple loggers at once, "**Real Time Start**" stores the dataset as it records while connected to the logger.)
- The status of the device will change to "**Running**", "**Waiting to Start**" or "**Waiting to Manual Start**", depending upon your start method.

- Disconnect the data logger from the interface cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

Downloading data from a data logger

- Connect the logger to the interface cable.
- Highlight the data logger in the Connected Devices list. Click "**Stop**" on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click "**Download**". You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC.

Device Maintenance

Battery Replacement

Materials:

Small Phillips Head Screwdriver
Replacement Battery (LTC-7PN)

- Puncture the center of the back label with the screw driver and unscrew the enclosure.
- Remove the battery by pulling it perpendicular to the circuit board.
- Insert the new battery into the terminals and verify it is secure.
- Screw the enclosure back together securely.

Note: Be sure not to over tighten the screws or strip the threads.

Recalibration

The PRTC110 standard calibration is two pressure points at 14.7 PSI and 30 PSI and one point at 0mVs for the thermocouple channel.

Additional Services:

Custom calibration and verification point options available, please call for pricing.

Call for custom calibration options to accommodate specific application needs.

*Prices and specifications subject to change. See MadgeTech's terms and conditions at www.madgetech.com
To send devices to MadgeTech for calibration, service or repair, please use the MadgeTech RMA Process by visiting www.madgetech.com, then under the services tab, select RMA Process.*